



McCANNA/MARPAC Valves

V582

# General Purpose Threaded End Ball Valves

## Installation and Maintenance Instructions



### Installation

These valves may be installed in any position, using good pipe fitting practices. Valves will seal in either direction.

During installation to threaded pipe, care should be exercised to prevent applying torque to valve body joint. Back welding is not recommended because of possible overheating of seats and seals. If it is necessary to back off pipe, it is important to grip the valve on the end being removed to prevent inadvertent disassembly.

### Maintenance

Stem seal leakage may often be corrected by tightening of gland until leakage stops.

### ▲ WARNING

McCANNA ball valves are designed and manufactured with the highest quality workmanship and materials, which meet all applicable industry standards.

Flowserve is anxious to avoid injuries and property damage which could result from misapplication of the product. Proper valve selection is imperative. Examples of misapplication or misuse of a valve include: use in a service in which the valve's pressure/temperature rating is exceeded, in a chemical service incompatible with the valve materials, failure to use caution in operating valves in high-temperature, high-pressure, or highly hazardous services, failure to maintain valves as recommended.

Improper application, installation or maintenance of this valve can result in danger to the user.

MARPAC® is a registered trademark of M&C Holding Company, Inc.

Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can (and often does) provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the Installation Operation Maintenance (IOM) instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

For more information about Flowserve Corporation, contact [www.flowserve.com](http://www.flowserve.com) or call USA 1 800 225 6989.

**FLOWSERVE CORPORATION**  
**FLOW CONTROL DIVISION**  
1978 Foreman Drive  
Cookeville, Tennessee 38501 USA  
Phone: 931 432 4021  
Facsimile: 931 432 5518